User Guide for the Timer Kit; CCTK1

<u>Kit items</u>

- TIMER, DUAL OUTLET, SEPARATELY CONTROLLABLE OUTLETS
- EXTENSION CORD 25 FT
- FASTENER SET (Velcro like strips)

Check timer to see that a display is present. If there is no display, plug timer in an active outlet for 1 hour to charge the internal battery.

1. Attach the fastener strip $(1 \times 3 \text{ inch Velcro like strip})$ on the center edge of the upper shelf. If using in a cabinet attach where the timer will be visible but does not interfere with the device loading.

2. Attach the other half (mating half) of the fastener strip to the back side of the timer. (May need other attachment point in a cabinet.)

3. Plug in the 2 power cords for the cart / cabinet outlet strips to each side of the timer. The timer outlets are on the sides of the timer.

4. Program the timer. Be sure the 2 outlets (A and B) do not have power at the same time. Refer to the timer instructions to set the programs for the A and B outlets.

5. Plug in the 25 ft extension cord to the rear of the timer. Then route the 25 ft extension cord from the cart or cabinet to a power outlet.

6. Mount the timer on the fastener strip (Velcro) located on the top shelf.

Note; The use of the separately controllable outlets is to permit charging by operating only one power outlet strip at a time. For units where there are 2 strips this arrangement results in the power draw by the timer being one-half of the total possible cart or cabinet load.









